


Notes

# USER HANDBOOK

## FOR

### SPS5.1 TEMPERATURE CONTROLLER

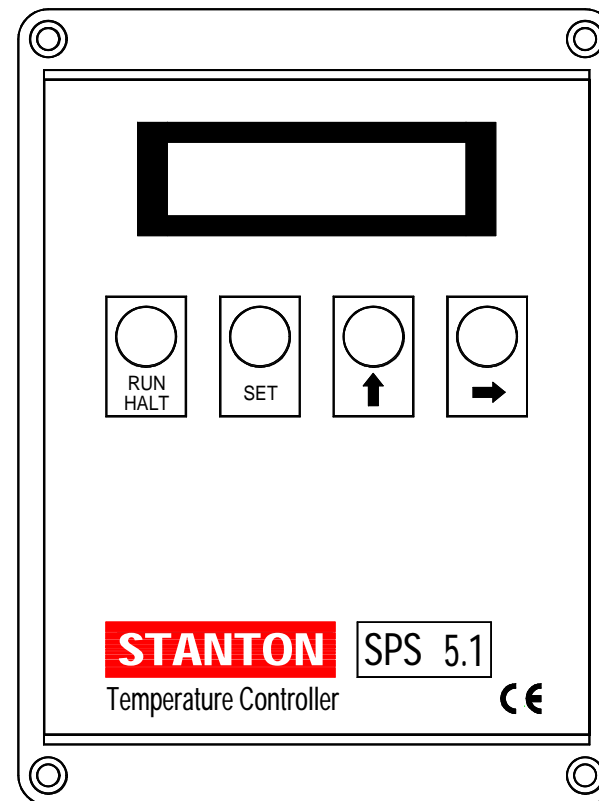

Stanton Pottery Supplies Ltd.,  
Canal Lane, Westport Lake,  
Tunstall, STOKE-ON-TRENT,  
Staffordshire, England.  
ST6 4NZ



Tel: +44 (0)1782 835467  
Fax: +44 (0)1782 812435  
email: sales@stanton-kilns.co.uk  
www.stanton-kilns.co.uk

Issue: 5.1E01  
Date: 10 July 98  
© Stanton Pottery Supplies Ltd.  
Manufactured in Staffordshire, U.K.

## Table of Contents

<b>1.0 Features</b>	3
<b>2.0 Operating Instructions</b>	3
2.1 Power On	3
2.2 Instrument Capabilities	3
2.3 Keys	4
2.4 Setting	5
2.5 Firing Displays	6
2.6 Power Fail Recovery	7
<b>3.0 Installation Instructions</b>	7
3.1 Safety	7
3.2 Instrument Mounting	8
3.3 Internal Component Identification	8
3.4 Wiring	9
<b>4.0 Error Displays</b>	10
Thermocouple Failure	10
Heater Failure	10
Other Errors	10
<b>5.0 Characteristics</b>	11

## 5.0 Characteristics

### Electrical

#### **Power supply**

Voltage range: 216.2 - 253V  
(Euronorm)

Frequency: 50Hz (nom)

Phases: 1

Power: Controller 3VA (max)  
Switched output 75VA

Fuse: 500mA slow-blow

#### **Control Relay**

Contact type: SPST NO

Switched Live -

nominal 230VAC output  
@300mA max.

#### **Thermocouple**

Types: K,N,R & S

(User Selectable)

#### **Connectors**

Max. wire size 1.5mm<sup>2</sup>

### Temperature

#### **Ramp Rate to temperature t1 setting**

Range: 20 to 240°C/hour

Resolution: 20°C/hour

#### **t1 setting**

Range: 0 to 1310°C

Resolution: 1°C

#### **t2 setting**

Trim Range: 0 to 1310°C

Resolution: 1°C

#### **START DELAY setting**

Range: 00:00 to 99hr 59min

Resolution: 1 min

#### **Control Accuracy**

Reading accuracy:  $\pm 0.25\%$  FSD  $\pm 1$  digit

P.I.D. Control

Cold junction compensation

### Environmental

Operating temperature range: 0 to +40°C

Storage temperature range: -10° to +55°C

Enclosure sealing: IP65

Enclosure material: ABS or Polycarbonate

Enclosure colour: Light Grey RAL 7035

### EMC (Electromagnetic Compatibility)

This instrument is designed for use mainly in Domestic & Light Industrial environments where electro-magnetic interference may cause a loss of accuracy of the displayed temperature reading of up to 3°C. Specified accuracy will be restored when the interference is removed.

The design of this instrument has been assessed and tested assuming maximum connecting lead lengths of 3.0 metres.

## 4.0 Error Displays

Thermocouple burn-out is indicated by this display. This indicates that the thermocouple has become open circuit. The controller detects this condition while firing and when in **READY** mode. The controller will lock up in this condition with the heater power off. The only way to reset the controller from this condition is to turn off the power, clear the fault and then turn the power to the instrument back on.

**THERMOCOUPLE  
OPEN CIRCUIT!**

To clear the fault the thermocouple and associated wiring should be tested for open circuits. If the thermocouple is open circuit it will need to be replaced.

Heater failure or thermocouple short circuit is indicated by this display. The instrument detects this condition only in RUN mode when heating power has been applied continuously for 15 minutes but the temperature has increased by less than 2°C. This indicates either that the wiring to the thermocouple is short circuited or (more likely) that one or more of the heater elements has failed and the heater is incapable of reaching the required temperature. The only way to reset the controller from this condition is to turn off the power, clear the fault and then turn the power to the instrument back on.

**THERMOCOUPLE  
SHORT CIRCUIT!**

The controller performs continuous checks of its circuitry and embedded software to check for potential error conditions. If such an error is detected the control relay is switched off and an error message is displayed for one minute. After this period the controller resets itself and restarts as if a power failure had occurred. If the potential error has cleared the instrument will proceed as normal. If the error condition persists the instrument will repeat the error display cycle.

**ERROR 7!**

In the event of an error contact the supplier quoting the error number.

## 1.0 Features

- Simple to use
- Large clear illuminated alphabetic display
- 2 Temperature break points (0-1310°C)
- Ramp rate control (20-240°C/hour)
- Start delay (0-99hr 59min)
- User settings stored in non-volatile memory
- Intelligent power fail recovery
- Thermocouple failure detection
- Heater element failure detection
- R, K, N & S type thermocouple selection

## 2.0 Operating Instructions

### 2.1 Power On


When power is applied to the controller the display will illuminate & show the model number, version number & the thermocouple type in use. **READY** will normally<sup>1</sup> be displayed. The heating power is off and the controller is ready to accept keyboard commands.

<sup>1</sup>If the display does not show **READY** then the instrument is in **RUN** mode because the previous firing sequence was interrupted by a power failure - the controller is now trying to complete this interrupted firing sequence. To return to **READY** mode, if required, press the **RUN/HALT** key.

### 2.2 Instrument Capabilities

#### General

A typical firing sequence is illustrated below:-

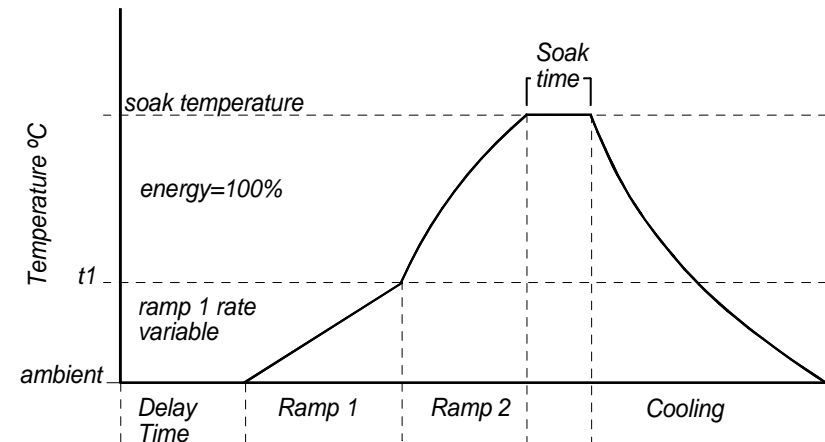

### Delay Time

This is a user-settable start delay time in the range 0 to 99 hours 59 mins. This feature can be used to delay firing - enabling firing during the night, possibly on low-tariff electricity.

### Ramp 1

Heating is performed to increase the temperature of the load from ambient to temperature t1. The value of t1 is user-settable in the range 0-1310°C. The rate of increase of temperature depends on the ramp rate selected. This ramp rate is user-settable in the range 20-240°C/hour.

### Ramp 2

Heating is performed at full power (100% energy) to increase the temperature of the load from temperature t1 to the soak temperature. The soak temperature is user-settable in the range 0-1310°C.

### Soak Time

This is the time that the controller dwells at the soak temperature. The soak time is user-settable in the range 0 to 99hr 59mins. After soaking the controller cuts off heating power and the load is allowed to cool naturally.

## 2.3 Keys



Pressing this key when **READY** is displayed will start a firing using firing parameters which have been previously selected with the **SET** key. Pressing this key when a firing in progress will immediately abort the firing.



Pressing this key when **READY** is displayed enables the user to select firing parameters. Pressing this key during a firing has no effect.





This is used to increment user input when in SET mode. Pressing this key has no effect when **READY** is displayed or when a firing is in progress.



This is used for digit select when in SET mode. It is also used to review controller status during firing. Pressing this key when **READY** is displayed has no effect.

## 3.4 Wiring

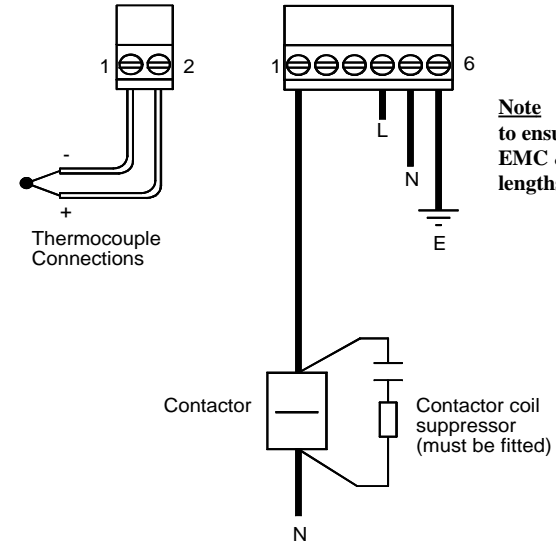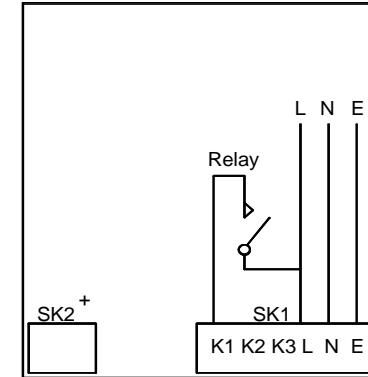

**Note**  
to ensure compliance with the EMC & LVD Directives lead lengths should not exceed 3m.

### 3.4.1 Contactor Coil Suppression

The coil of the contactor **must be suppressed** with an RC filter network. The RC network must be connected directly across the coil terminals on the contactor.

Suitable proprietary RC filter networks fitted with insulated wire leads are:-


- |    |                               |                  |
|----|-------------------------------|------------------|
| 1. | RS Components                 | Part No. 210-364 |
| 2. | RS Components (tab fixing)    | Part No. 210-370 |
| 3. | Farnell Electronic Components | Part No. 218-893 |

### 3.2 Instrument Mounting

Mount the controller on a suitable vertical surface which will not get hot, using the 4 off 4mm diameter mounting holes. The mounting hole spacing is marked on the back of the controller and is 88mm x 148mm. The cable gland hole is 20mm diameter and should normally be at the bottom to guard against moisture ingress. The instrument should be mounted away from direct sources of heat.

### 3.3 Internal Component Identification

Remove the front of the instrument by unscrewing the 4 self-tapping screws. The required connectors and configuration jumpers can be identified on the lid mounted printed circuit board with this diagram:-

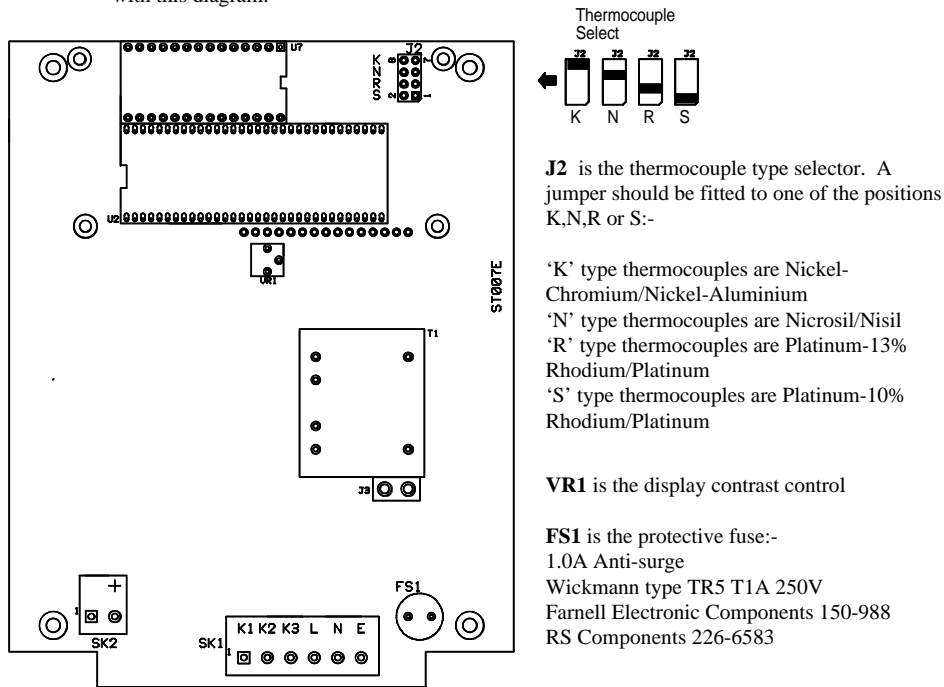

**SK2** is the thermocouple connector. The positive terminal is clearly marked.

**SK1** is the mains/control connector:-

- K1 is the switched Mains Live output to the heater contactor
- K2 & K3 are not used (not connected) on the SPS5.1
- K4 is Mains Live input
- K5 is Mains Neutral input
- K6 is Earth input (an Earth **must** be fitted to this controller)

### 2.4 Setting

<b>SET RAMP RATE 1</b> 100 °C/HOUR	Pressing the <b>SET</b> key when <b>READY</b> is displayed causes the currently selected ramp rate 1 to be shown. This is the rate of increase of temperature from ambient to t1. To increment the ramp rate in steps of 20°C/hour press the <b>↑</b> key.
<b>SET T1</b> 0350°C	Press the <b>SET</b> key again or press the <b>→</b> key to display the current setting for t1. This can be set in the range 0°C to 1310°C with the <b>↑</b> & <b>→</b> keys.
<b>SET SOAK TEMP</b> 1000°C	Press the <b>SET</b> key again to display the current setting for soak temperature. This can be set in the range 0°C to 1310°C with the <b>↑</b> & <b>→</b> keys.
<b>SET SOAK PERIOD</b> 00:30	Press the <b>SET</b> key again to display the current setting for the soak period. This can be set from 00:00 (zero) to 99:59 (99 hours 59 mins) with the <b>↑</b> & <b>→</b> keys.
<b>SET START DELAY</b> 00:00	Press the <b>SET</b> key again to display the current setting for the start delay. This can be set from 00:00 (zero) to 99:59 (99 hours 59 mins) with the <b>↑</b> & <b>→</b> keys.

Pressing the **SET** key again returns to the **READY** display. The firing parameters entered or reviewed above are stored in non-volatile memory.

To start a firing press the **RUN/HALT** key.

## 2.5 Firing Displays

**DELAYED START...  
TIME LEFT 04:32** This is shown when a delayed start is in progress. The display shows the hours:minutes remaining until firing commences.

**SLOW HEATING...→  
KILN TEMP 23°C** This shows that the initial ramp, ramp 1 is being fired. For additional information press the **→** key. This additional information is also displayed once per minute.

**FAST HEATING...→  
KILN TEMP 817°C** This shows that the final ramp, ramp 2 is being fired. Press the **→** key for additional information.

**SOAKING...→  
KILN TEMP 1200°C** This shows that the controller is soaking. Press the **→** key for additional information including the time left in soak.

**COOLING... HOT!  
KILN TEMP 1172°C** This shows that the soak period is complete and that the load is cooling naturally. **HOT!** is displayed flashing.

**COOL  
KILN TEMP 96°C** This shows that the load has cooled to less than 100°C.

**READY** This shows that the load has cooled to less than 40°C & firing is complete.

## 2.6 Power Fail Recovery

In the event of power failure followed by power restoration, the instrument attempts to take intelligent recovery actions to avoid a firing being aborted. The instrument has no direct knowledge of how long the power has been off so the recovery action taken depends on where the instrument had reached in the firing sequence prior to power failure as detailed below:-

Before Power Failure	After Power Failure
In <b>READY</b> mode	In <b>READY</b> mode
Timing delayed start	Immediate start as if the end of Delay Time reached
On Ramp 1 approaching t1	Immediate restart. Temperature will increase at ramp rate 1 of the current program starting at the present temperature
On Ramp 2 approaching t2	Immediate restart. If present temperature greater than t1 temperature will increase at ramp rate 2 of the current programme starting at the present temperature. If present temperature is less than t1 temperature will increase at ramp rate 1 of the current program starting at the present temperature
In Soak Period timing Soak Time	As above. The full soak period of the current program will be re-applied
Cooling after SOAK period	Cooling continued.

## 3.0 Installation Instructions

### 3.1 Safety



**ISOLATE  
BEFORE  
REMOVING  
COVER**

Installation Category: II  
Pollution Class: 2

230V ~ 50HZ 1.0A



Fuse: 1.0A Anti-surge  
Wickmann type TR5 T1A 250V

### **WARNING**

**ISOLATE FROM ELECTRICAL SUPPLY BEFORE OPENING THIS INSTRUMENT FOR INSTALLATION, CONFIGURATION OR REPAIR PURPOSES**